


Eaton PoE UPS (Indoor)



Key feature

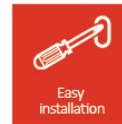


- 15.4W power rating
- Up to 180min backup time for 8W camera (normal type)
- Average battery lifespan up to 7 years
- Compact size and easy installation
- Support PoE camera operation during PoE switch failure/replacement or cable loss/damage
- Designed to PoE standard IEEE 802.3af and IEEE 802.3at



PoE switch




PoE network camera

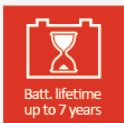Differentiation points	Why it matters?
Micro size and easy to install to closed to camera 	All the failure before PoE UPS including power lost, PoE switch fail/replacement, cable lost/damage can be protected by PoE UPS. Normal UPS only can protect from power lost.
Backup protection focus 	PoE UPS backup protection is only for core device- camera but not for all system equipment then it will help to save total cost and good for backup time.
Long maintenance cycle 	Average battery lifespan up to 7 year which help for total cost saving from maintenance.



Powering Business Worldwide

What PoE UPS differ from normal UPS

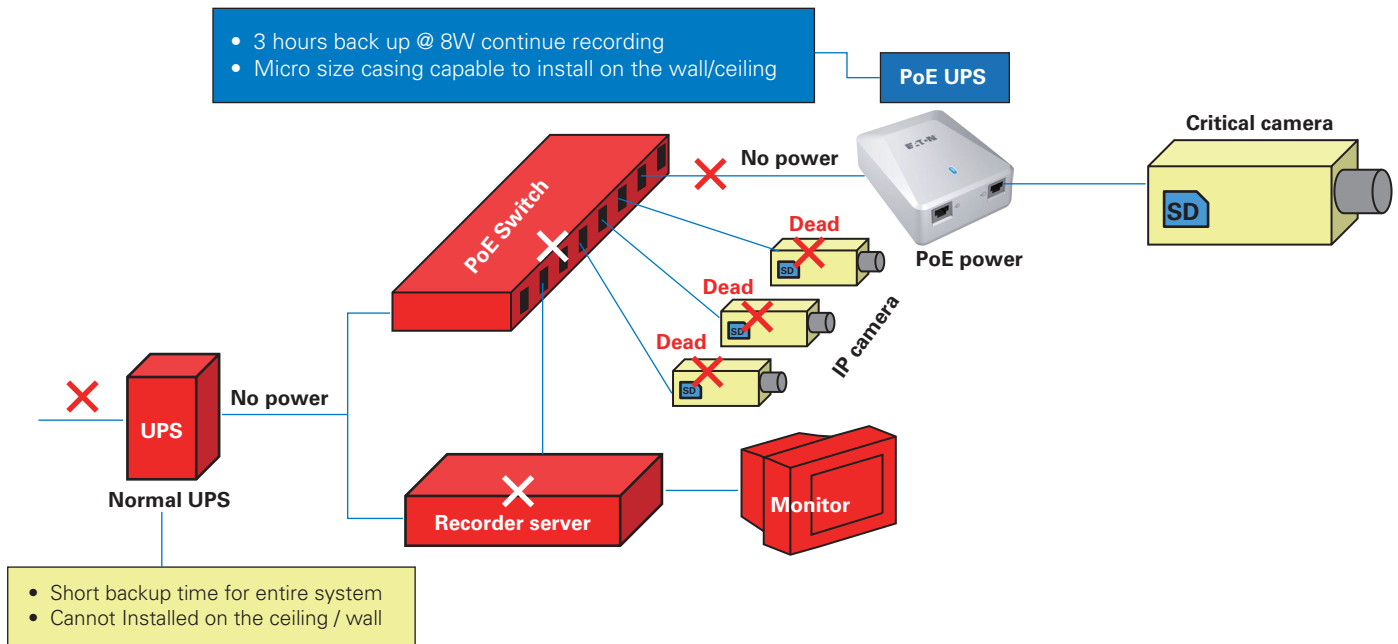

Product spec

Input	
Acceptable input voltage	37 ~ 57V DC
Input power	30W max
Input connector	RJ45
Internet	10M/100M
Output	
Line mode output voltage	37 ~ 57V DC
Backup mode output voltage	48V+/-1%
Output power	15.4W max
Outlet connector	RJ45
Battery	
Battery type	Li-ion
Battery rating	3.17Ah/cell
Battery voltage	3.78V*3
Battery cell	3
Backup time	90mins @15.4W 180mins@8W
Charger	
Floating charging voltage	13.05V (4.35V/cell)
Charger current	0.6A max
Recharging time (to 90%)	7h

Interface	
Display	LED
Size	
WxHxD (mm)	115*90*39mm
Weight	
Net weight(kg)	0.325 kg
Standard	
POE	802.3af/802.3at
EMC	EN55032 CLASS B
Safety (Voluntary)	EN60950
LI BATTERY	IEC62133
ME	ISTA 2A and EN60950
Temperature	
Operation temperature & humidity	Charging: 0-45 °c Discharging: -10-55 °c Humidity: <=85%
Storage temperature	1month: -20-60 °C 3month: -20-45 °C 1year: -20-25 °C Humidity: 45%-90%

Electrical Sector Asia Pacific
No.3, Lane 280, Linhong Road,
Changning District, Shanghai

© 2018 Eaton Corporation
All Rights Reserved
Printed in China
March 2018