

Eaton 5A UPS

700VA – 2200VA



Ideal for protecting:

- **PC and workstations**
- **Internet access point**
- **Point of sales equipment**
- **Business telephony**
- **Self-service kiosk**



Line-interactive UPS

Line-interactive technology at an affordable price

- Secure your data and equipment by protecting you against power outages and bad power quality
- With Automatic Voltage Regulation (AVR), Eaton 5A UPS can ride through under & over voltage without utilizing battery
- Unmatched price/performance ratio
- Surge Protection for all outlets


Eaton reliability

- Rely on batteries anytime: Eaton 5A UPS can start up on batteries without mains (Cold Start)
- Ensure peace of mind with 2 years warranty

Easy integration

- Ease of connection to any equipment (PC, HD TV, internet gateway) with Universal/ NEMA Universal/ Schuko outlets
- Install Eaton 5A UPS anywhere thanks to its small size

Generator
Compatible

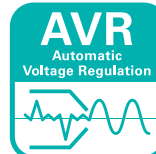

Auto Restart



DC Start Function



WARRANTY

2
YEARS

Eaton 5A UPS

- 1 - LED indicator
- 2 - On / Off button
- 3 - Universal outlets



- 4 - AC input breaker
- 5 - AC input

TECHNICAL SPECIFICATIONS	5A700I	5A900I	5A1200I	5A1500I	5A2200I
Rating (VA/W)	700VA/360W	900VA/480W	1200VA/650W	1500VA/900W	2200VA/1200W
Format	Tower				
Electrical characteristics					
Input voltage range	140–300 VAC				
Frequency range	60/50 Hz (Auto sensing)				
Surge protection	Yes				
Generator compatible	Yes				
Mute by power key	Yes				
Circuit breaker	Yes				
Output					
Output voltage	230 VAC				
Output voltage reg. (Battery mode)	±10%				
Battery wave form	Stepped sine wave				
Protection	PCBA current sensor (F/W protection)				
Output backup socket	DIN model: (2) Schuko outlets NEMA model: (4) NEMA Universal outlets UNI model: (2) Universal outlets		DIN model: (4) Schuko outlets NEMA model: (6) NEMA universal outlets UNI model: (4) Universal outlets		
Transfer time	2–6ms typical, 10ms max				
Battery					
Type	12V/7Ah x1	12V/9Ah x1	12V/9Ah x1	12V/7Ah x2	12V/9Ah x2
Floating Charging Voltage	13.5–13.8V			27–27.6V	
Recharge time	4–6 hours recover to 90% capacity				
Typical battery runtime					
IT Load (100W)	18 min	30 min	25 min	55 min	60 min
50% load	5 min	5 min	4.8 min	8 min	8.5 min
75% load	1.5 min	1 min	25 s	3 min	1.8 min
Interface					
On / Off switch	Yes				
Indicator	LED				
Communication–USB	No				
Communication–RS232	No				
RJ11 protection	No				
Physical					
Dimension D x W x H (mm)	297*101*142		370*138*165		
Weight (kg)	4	4.7	6.25	10.85	11.7
Package	Color box				
Customer service and support					
Warranty	2 years				

* Backup times are approximate and may vary with equipment, configuration, battery age, temperature, etc.

Part Numbers	700VA/360W	900VA/480W	1200VA/650W	1500VA/900W	2200VA/1200W
Schuko outlets	5A700I-DIN	5A900I-DIN	5A1200I-DIN	5A1500I-DIN	5A2200I-DIN
NEMA outlets	5A700I-NEMA	5A900I-NEMA	5A1200I-NEMA	5A1500I-NEMA	5A2200I-NEMA
Universal outlets	5A700I-UNI	5A900I-UNI	5A1200I-UNI	5A1500I-UNI	5A2200I-UNI

In the interests of continuous product improvement, all specifications are subject to change without notice.

For more information, visit [Eaton.com/My](https://www.eaton.com/My)